



TNC-SVR01/TNC-SVR02

# TNC-SVR0\*

## PRE-CONFIGURED MODULAR BASE STATION FOR THE RAPID IMPLEMENTATION AND ADJUSTMENT OF **CONTROL SYSTEMS**

Pre-configured modular base station with power supply units, relays and controllers, for the rapid implementation and adjustment of control systems

- Space saving, compact design
- All components are already wired to rail mount terminals
- Quick, error free assembly and installation
- Robust design
- With TROXNETCOM Basic User Software for rapid and safe commissioning and configuration
- Integral display, also for operation


**Application** 

#### **Application**

- Pre-configured AS-i base stations for repeaters (TNC-A2225), with an AS-i power supply unit TNC-A1256 = 2.8 A or TNC-A1258 = 8 A
   Installed and wired to rail mount terminals
   Plastic casing, free of halogens, with transparent cover
   Allows for AS-i cable extension by 100 m

# **TECHNICAL INFORMATION**

## AS-i pre-configured switch boxes TNC-SVR01, TNC-SVR02

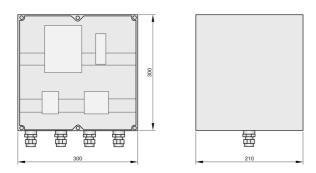


7	
Description	TNC-SVR01/SVR02
Casing dimensions (B × H × T)	300 × 300 × 210 mm
Casing material	Plastic, free of halogens, with transparent cover
Wired components	TNC-SVR01: 1 × TNC-A2225; 1 × TNC-A1256; TNC-SVR02: 1 × TNC-A2225; 1 × TNC-A1258
Mains supply	230 V AC, 50 Hz
Max. power consumption	TNC-SVR01: 0.1 KW; TNC-SVR02: 0.24 KW
Pre fuse	20 A
Protection level	IP 65

## **Standard description (characteristics)**

Switch box 'Repeater'

- Dimensions: 300 × 300 × 210 mm
   Casing materials: Plastic, free of halogens, with transparent cover
   Components: installed and wired to rail mount terminals
- Cable glands: M20 with clamping bracket for mains cable and AS-i bus cable Mains supply: 230 V AC, 50 Hz
  Repeater: TNC-A2225

- Power supply unit: TNC-A1256 = 2.8 A (TNC-SVR01) or TNC-A1258 = 8 A (TNC-SVR02)
   Type: TNC-SVR0\*

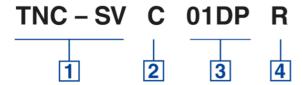

1 Type

**TNC-SV** Configured switch cabinet

# 2 Type of base station

R Repeater
C Controller
D Display

# 3 Components

Repeater (R)

01 1×TNC-A2225, 1×TNC-A1256
02 1×TNC-A2225, 1×TNC-A1256
03 1×TNC-A2225, 1×TNC-A1258
Controller (C)
01DP 1×TNC-A1305, 1×TNC-A1258, 1×TNC-D1020
02DP 1×TNC-A1305, 1×TNC-A1258, 1×TNC-D1020
03DP 1×TNC-A1306, 2×TNC-A1256, 1×TNC-D1020
04DP 1×TNC-A1353, 1×TNC-A1256, 1×TNC-D1020
01MB 1×TNC-A1353, 1×TNC-A1256, 1×TNC-D1020
02MB 1×TNC-A1353, 1×TNC-A1256, 1×TNC-D1020
03MB 1×TNC-A1353, 1×TNC-A1256, 1×TNC-D1020
04MB 1×TNC-A1354, 2×TNC-A1258, 1×TNC-D1020
Display (D)
TP043 1×TP043N, 1×TNC-D1030
TP057 1×TP057N, 1×TNC-D1030
TP104 1×TP104N, 1×TNC-D1030
TP104 1×TP104N, 1×TNC-D1030

#### 4 Relay module

For controllers only (C)
No entry: no relay module
R 1×TNC-Z0094
RR 2×TNC-Z0094